



Truck Scale



About PS Truck Scale

PS Truck Scale is an ideal scale to check truck weights for reference. It consists of two scales and 4 ramps. It weighs the truck two wheels (axle) at a time. The total weight will be summed up by the individual readouts. With attached Controller/Indicator, the individual axle weight and the total weight will be recorded automatically and a printout can be issued after all axle weights has been taken.

Specifications

- Heavy duty design
- Two scales + four ramps set (each 30,000 lbs capacity)
- 1/2" deck plate
- Size: 36" x 84" x 6" (each scale)
- 8 large envelop shear beam load cells
- Stainless steel NEMA junction boxes with signal trim board
- 15' load cell cable
- 8 adjustable swivel steel feet
- PS-IN202SS indicator with printer output
- Optional printer
- Package configures and calibrated with 12000 divisions
- One-year limited warranty



KAPS House, Kilimani, Kindaruma Lane P.O. Box 3002-00506 Nairobi **Tel:** +254 732 146 000 **Email:** kaps@kaps.co.ke **Website:** www.kaps.co.ke